


226111x52A

MOWER HOUSING ASSEMBLY

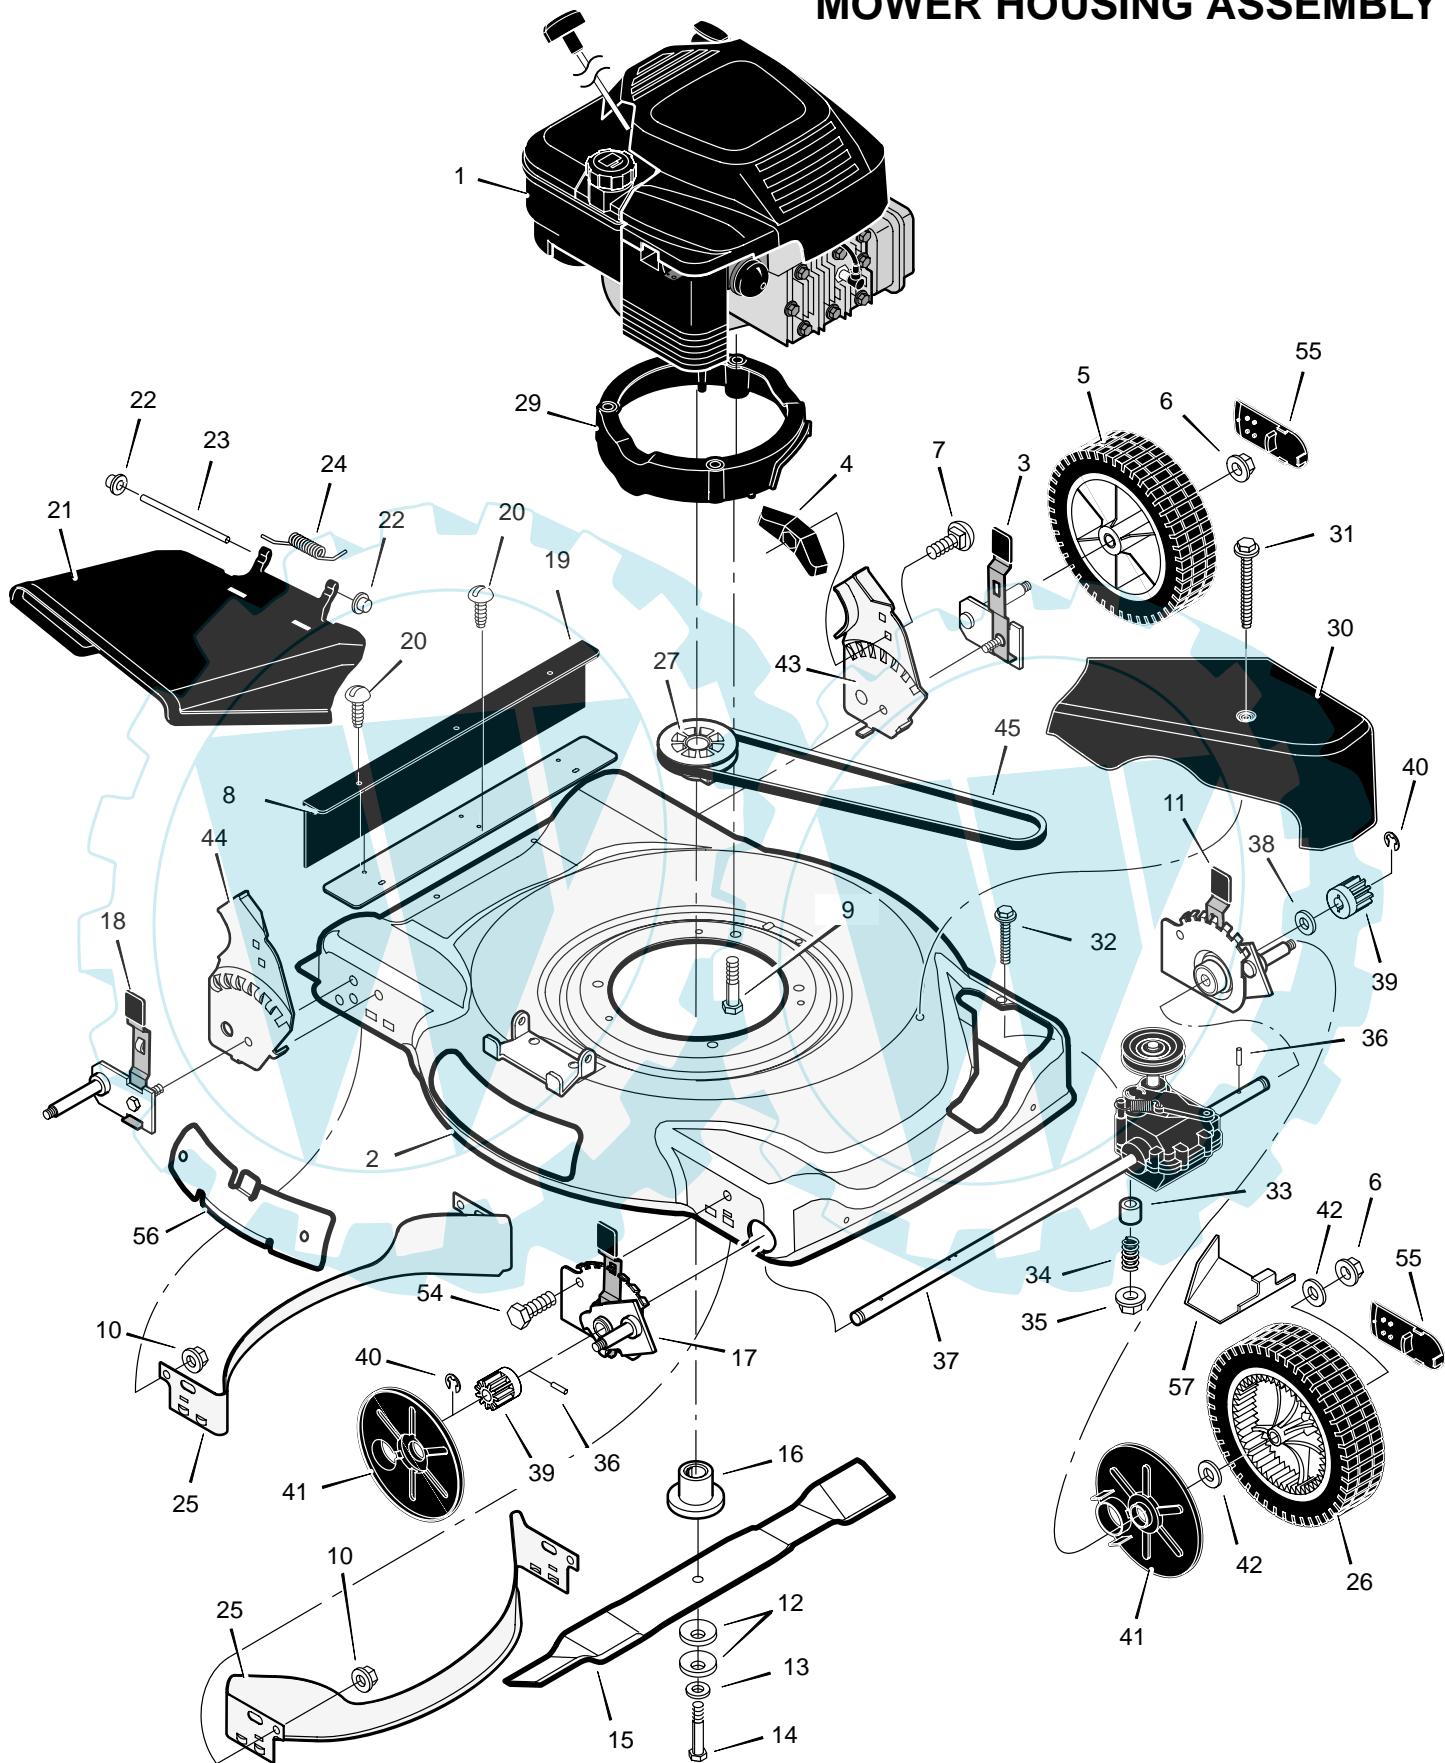


MOWER HOUSING ASSEMBLY

1	—	Engine *	27	1101653	Pulley	
2	776023	Housing	29	1101786	Base, Engine (Black)	
3	672641	Height Adjuster, Left Rear	30	1101830	Cover, Belt (Black)	
4	071495	Knob	31	26x313	Screw	
5	071132	Wheel and Tire, Rear	32	01x118	Bolt	
6	015x84	Locknut, Flange	33	043844	Spacer	
7	002x81	Bolt, Carriage	34	164x27	Spring	
8	672711E701	Extension, Rear	35	015x88	Nut	
9	025x11	Bolt, Engine	36	043629	Pin, Drive	
10	015x68	Nut	37	1101571	Transmission – Note: There are no internal serviceable parts for the transmission.	
11	672643	Height Adjuster, Left Front	38	17x186	Washer	
12	17x137	Washer, Belleville	39	071792	Gear, Pinion	
13	17x124	Washer	40	011x16	E-Ring	
14	01x148	Bolt, Hex	41	071780	Cover, Dust	
15	1101120E701	Blade	42	17x169	Washer	
16	672094	Adapter, Blade	43	1101303E700	Bracket, Left Handle	
17	672642	Height, Adjuster, Right Frt.	44	1101302E700	Bracket, Right Handle	
18	672640	Height, Adjuster, Right Rr.	45	37x123	Belt, Briggs & Stratton	
19	672738	Guard, Rear	54	001x85	Bolt	
20	26x245	Screw	55	043615	Hub Cap	
21	672421	Deflector, Chute	56	672422 Z	Plate, Mulch – Optional	
22	028x42	Push-On Cap	57	1101961	Cover, Transmission	
23	215x11 Z	Pin, Pivot	—	F-040436L	Book, Instruction	
24	0166x5	Spring	* Parts are available from the Engine manufacturer.			
25	672744E701	Baffle +	+ Included with Housing, Key No. 1.			
26	071133	Wheel and Tire, Drive				

226111x52A

HANDLE ASSEMBLY

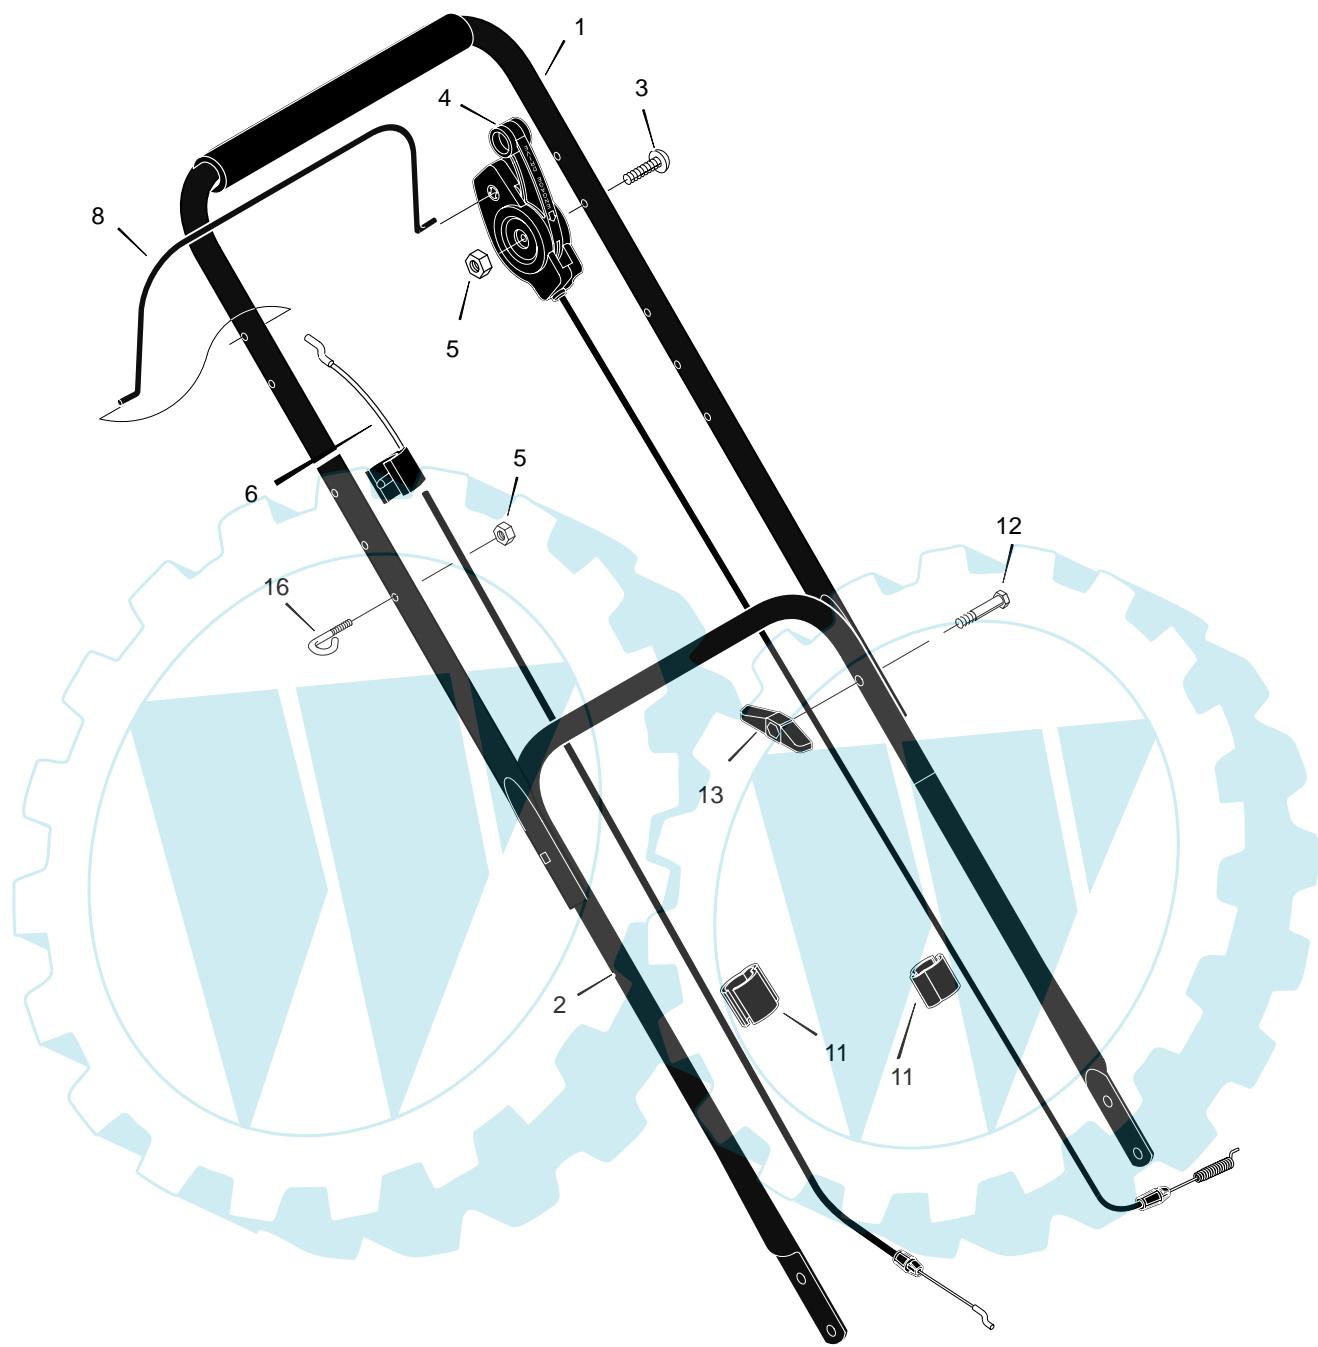

1	1101557E701	Handle, Upper (Black)	8	1101076E701	Lever, Stop
2	672906E701	Handle, Lower (Black)	11	1101353	Fastener, Cable
3	025x14	Bolt	12	002x77	Bolt
4	1101670	Control, Drive	13	071294	Knob
5	15x116	Locknut	16	071530	Guide, Rope
6	1101365	Cable, Stop			